

FRONT WHEEL/SUSPENSION/STEERING

Do not reuse the old bearings.


Install the bearing remover head into the bearing. From the opposite side of the wheel, install the bearing remover shaft and drive the bearing out of the wheel hub.

TOOLS:

Bearing remover shaft 07746-0050100

Bearing remover head, 12 mm 07746-0050300

Remove the distance collar and drive out the other bearing.

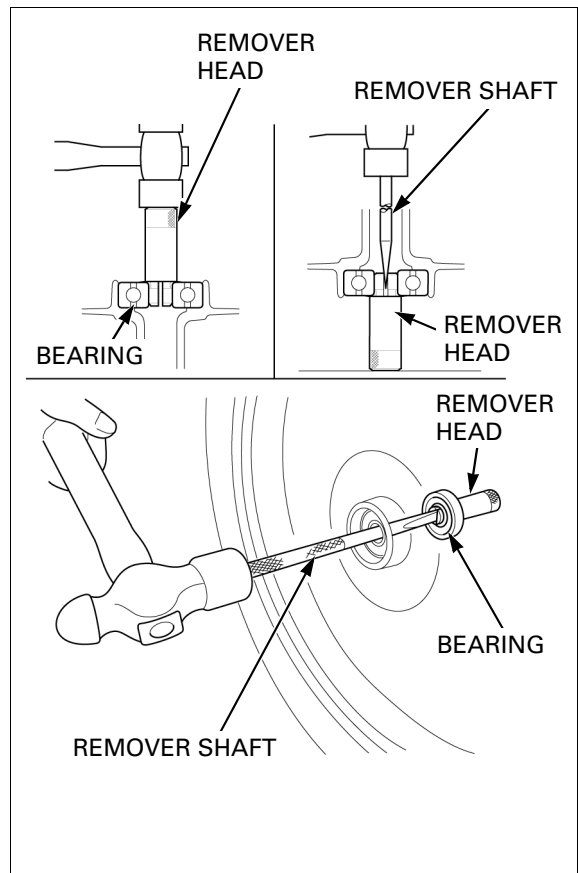


INSPECTION

AXLE

Place the axle in V-blocks and measure the runout. Actual runout is 1/2 the total indicator reading.

SERVICE LIMIT: 0.2 mm (0.01 in)

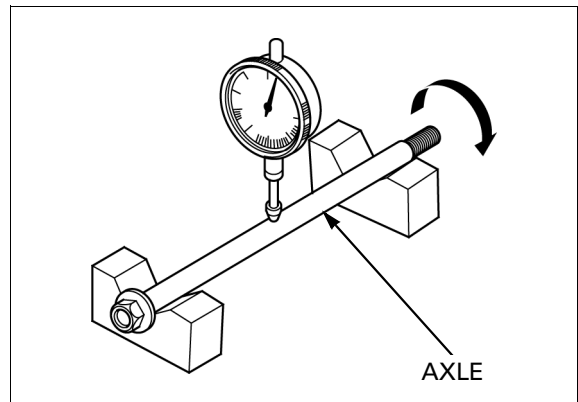

WHEEL BEARING

Turn the inner race of each bearing with your finger, the bearings should turn smoothly and quietly. Also check that the bearing outer race fits tightly in the hub.

Replace the wheel bearings in pairs.

Remove and discard the bearings if the races do not turn smoothly, quietly, or if they fit loosely in the hub.

