



Fix bottom case in vice

Remove socket bolt from bottom case

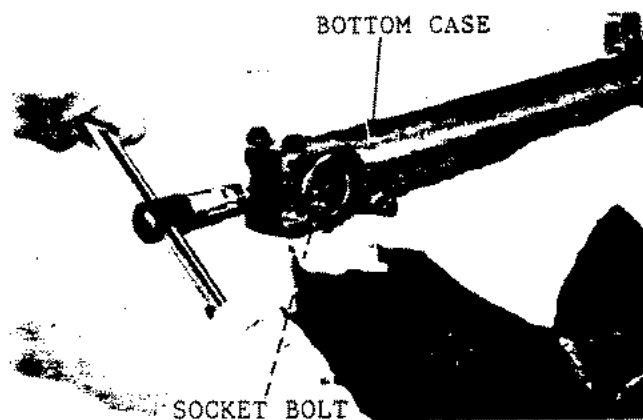


Remove dust seal

Remove snap ring

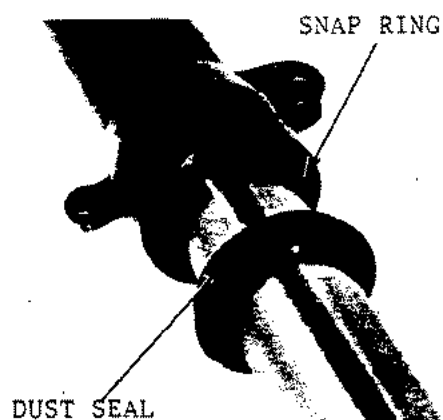

Pull out fork pipe from bottom case

* Push in fork pipe (not too hard)
and pull strongly and repeat

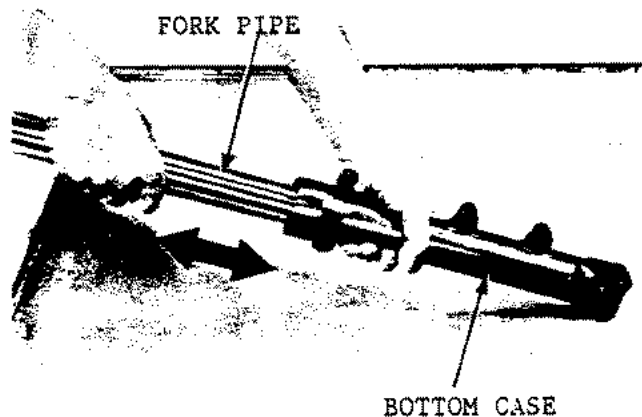

Remove oil lock piece from bottom case
Remove oil seal back up ring and
guide bush from fork pipe

* Only remove fork pipe bush if
replacing with a new one

