

ASSEMBLY

Align cylinder shaft with switch hole and install
 Install 3 screws and cramp with band
 Cut band excess
 After assembly inspect switch current
 (18.6)

INSTALLATION

In reverse order to removal

Handle switch

Remove fuel tank coupler holder 9P mini coupler (B1 and R) and connector

* After install ing check switch movement

○—○ If current then okay

KILL SWITCH

	IG	BAT6
	B1/W	B1
OFF		
RUN	○—○	

LIGHTING SWITCH

	BAT5	TL	BAT4	HL
	Br/Bu	Br/W	B1/R	Bu/W
P	○—○			
(N)	○—○		○—○	
H	○—○		○—○	

PASSING SWITCH

	BAT3	Hi
	W/G	Bu
FREE		
PUSH	○—○	

HORN SWITCH

	BAT3	Ho
	W/G	Lg
FREE		
PUSH	○—○	

DIMMER SWITCH

	HL	Lo	Hi
	Bu/W	W	Bu
Lo	○—○		
(N)	○—○	○—○	
Hi	○—○		○—○

WINKER SWITCH

	W	R	L
	Gr	Lb	O
R	○—○		
N			
L	○—○		

