


* Remove muffler and exhaust chamber when cold

* Exhaust pipe is stainless. Thus oil and dirt stains can be removed with the engine running. If removing stains use a specified stainless steel cleaner and wash with sponge

Removal


Remove lower fairing (22.35)

Remove front cylinder exhaust chamber joint nut, silencer pinch bolt and chamber pinch bolt
In the same way, remove exhsust chamber
Inspect exhaust chamber bush for damage

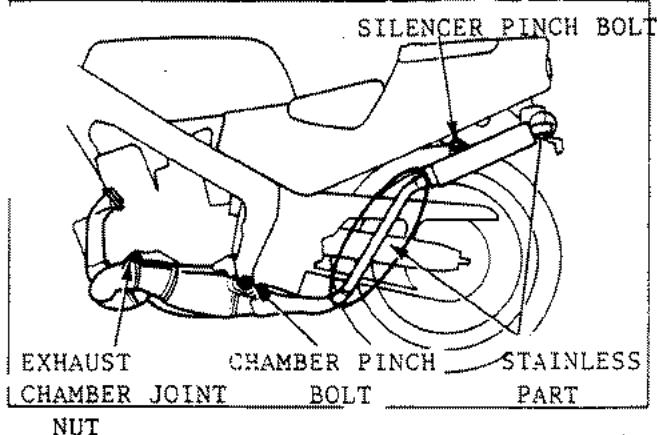

Installation

Pull off exhsust chamber spring seat face
Install a new spring seat to exhaust chamber

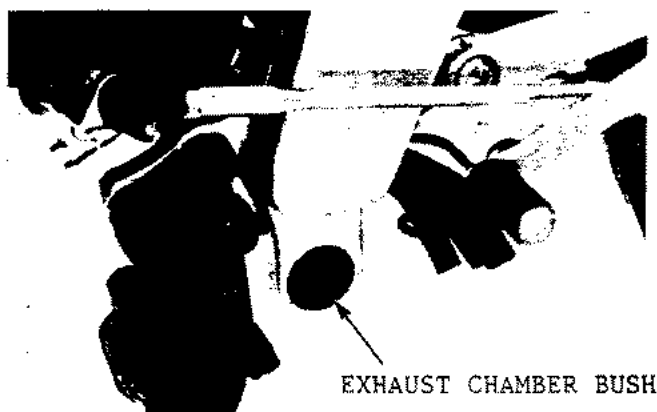

When installing, insert the bolts and nuts by hand and tighten

- exhaust chamber joint nut
- exhaust chamber pinch bolt
- silencer pinch bolt

Torque:

Exhaust chamber joint nut 2.3-2.7 Kg.m
Exhaust chamber pinch bolt 1.8-2.5 Kg.m
Silencer pinch bolt 1.8-2.5 Kg.m

* Install silencer pinch bolt as in the illustration

