


AIR CLEANER HOUSING

REMOVAL/INSTALLATION


Raise the rear wheel off the ground by placing a box or work stand under the engine.

Remove the following:

- Side covers (page 2-2)
- Seat (page 2-2)
- Muffler (page 2-6)
- Battery (page 17-5)
- Ignition control module (ICM) (page 4-6)
- Starter relay switch [1]
- Fuse box [2]

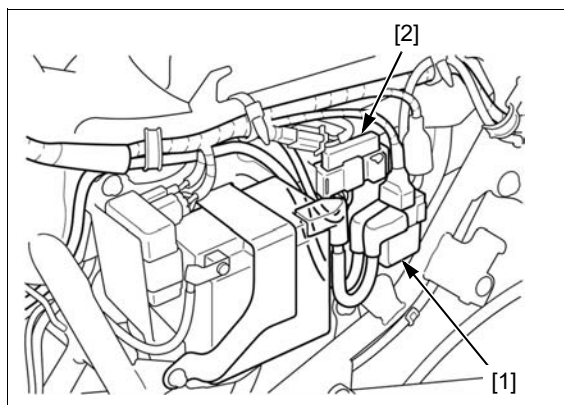

Loosen the connecting boot band screw [1].
Disconnect the crankcase breather hose [2] and carburetor air vent hose [3].

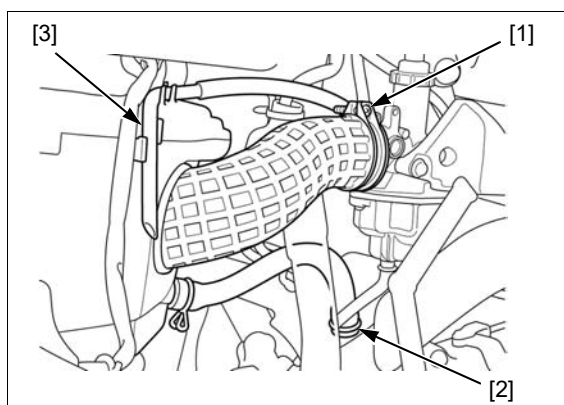

Remove the shock absorber lower mounting bolt [1] and nut [2].
Remove the air cleaner housing mounting bolts [3] and washer [4].
Remove the air cleaner housing [5] to the backward.

Installation is in the reverse order of removal.

TORQUE:

Shock absorber lower mounting nut:
44 N·m (45 kgf·m, 32 lbf·ft)

