



INSTALLATION

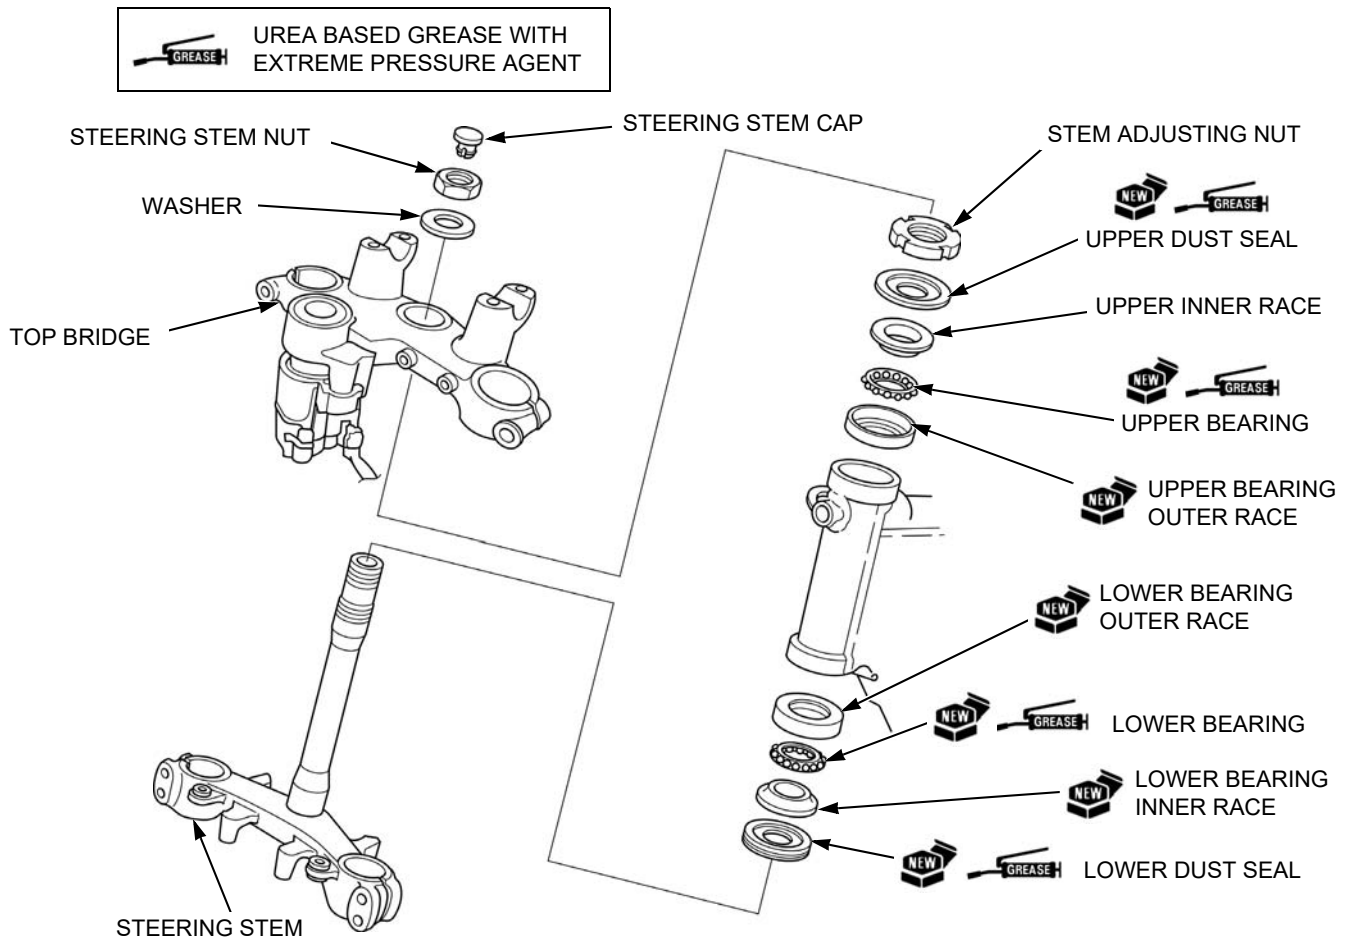

Apply urea based multi-purpose grease (page 1-15) to a new lower bearing [1].
Install the lower bearing onto the steering stem [2].
Install the steering stem into the head pipe.

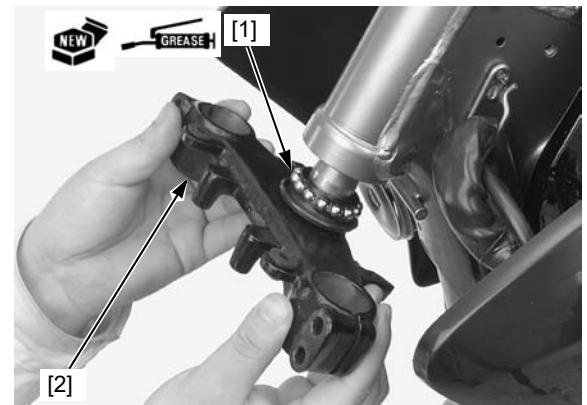

Apply urea based multi-purpose grease (page 1-15) to a new upper bearing [1].
Install the upper bearing.
Install the upper bearing inner race [2].

