

5. FUEL SYSTEM

SERVICE INFORMATION	5-1	CARBURETOR DISASSEMBLY	5-5
TROUBLESHOOTING	5-3	CARBURETOR ASSEMBLY	5-9
AIR CLEANER HOUSING REMOVAL/INSTALLATION	5-4	CARBURETOR INSTALLATION	5-14
CRANKCASE BREATHER	5-4	PILOT SCREW ADJUSTMENT	5-15
CARBURETOR REMOVAL	5-5		

5

SERVICE INFORMATION

GENERAL

▲WARNING

- Gasoline is extremely flammable and is explosive under certain condition. **KEEP OUT OF REACH OF CHILDREN.**
- If the engine must be running to do some work, make sure the area is well ventilated. Never run the engine in an enclosed area. The exhaust contains poisonous carbon monoxide gas that can cause loss of consciousness and may lead to death. Run the engine in an open area or with an exhaust evacuation system in an enclosed area.
- Bending or twisting the control cables will impair smooth operation and could cause the cables to stick or bind, resulting in loss of vehicle control.

- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.

NOTE:

If the vehicle is to be stored for more than one month, drain the float bowls. Fuel left in the float bowls may cause clogged jets, resulting in hard starting or poor driveability.

- Before disassembling the carburetor, place an approved gasoline container under the carburetor drain tube, loosen the drain screw and drain the carburetor.
- When disassembling the fuel system parts, note the locations of the O-rings. Replace them with new ones during assembly.
- After removing the carburetor, wrap the intake port of the engine with a shop towel or cover it with a piece of tape to prevent any foreign material from dropping into the engine. Be sure to remove the cover when installing the carburetor.