

CLUTCH/KICKSTARTER/GEARSHIFT LINKAGE

TOOLS

Gear holder	07724-00010200
Clutch center holder	07724-00050002
Attachment, 24 × 26 mm	07746-0010700
Pilot, 20 mm	07746-0040500
Driver	07749-0010000

TROUBLESHOOTING

- Faulty clutch operation can usually be corrected by adjusting the clutch lever free play.

HARD TO SHIFT

- Incorrect clutch adjustment
- Loose stopper plate bolt
- Damaged stopper plate and pin
- Damaged gearshift spindle

TRANSMISSION JUMPS OUT OF GEAR

- Worn shift drum stopper arm
- Weak or broken shift arm return spring
- Loose stopper plate bolt

GEARSHIFT PEDAL WILL NOT RETURN

- Weak or broken gearshift spindle return spring
- Bent gearshift spindle

CLUTCH SLIPS WHEN ACCELERATING

- Incorrect clutch adjustment
- Worn clutch discs
- Weak clutch springs

MOTORCYCLE CREEPS WITH THE ENGINE IDLING

- Incorrect clutch adjustment
- Clutch plate warped
- Faulty clutch lifter
- Incorrect engine oil