

### DAMPER ROD INSPECTION

Inspect the damper rod sliding surface for damage or distortion.

### DAMPER ASSEMBLY

Before assembly, wash all parts with solvent and blow them dry with compressed air. Be sure that there is no dust or lint on any of the parts.

**CAUTION:**

- Use added care to avoid getting solvent on the piston ring and O-ring.
- The valve arrangement and number of valves may differ from those shown.

