


If a Fuse Blows

Main Fuse Access

UNDER SEAT

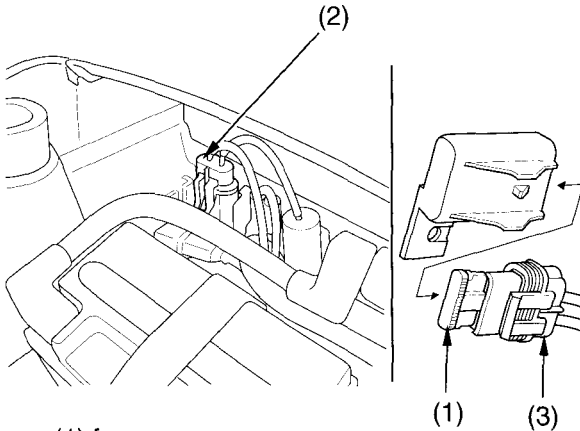

- (1) fuse
- (2) fuse holder assembly
- (3) fuse holder

1. To prevent an accidental short circuit, turn the ignition switch OFF (\bigcirc) before checking or replacing the fuses.
2. To access the fuse (1), remove the seat (page 88).
3. Remove the fuse holder assembly (2).
4. Pull the old fuse out of the fuse holder (3).
5. Push the new fuse in to the fuse holder.
6. Install the fuse holder assembly and seat.