

Installation:


1. Install the side collars into the left and right side wheel hub.
2. Position the front wheel between the fork legs and insert the axle from the right side, through the right fork leg and wheel hub.

To avoid damaging the brake pads while installing the wheel, carefully fit the brake disc between the pads.

3. Tighten the front axle shaft to the specified torque:

74 N·m (7.5 kgf·m , 54 lbf·ft)

4. Align the index line (3) of the front axle shaft with the surface (4) of fork leg.

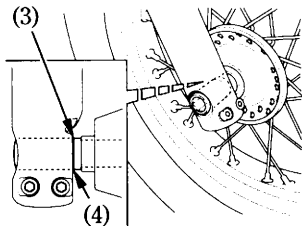

(3) Index line

(4) Surface

5. Operate the front brake and pump the fork several times. Check for free wheel rotation after the brake is released. Recheck the wheel if the brake drags or the wheel does not rotate freely.
6. Tighten the axle pinch bolts on the right fork leg to specified torque:
22 N·m (2.2 kgf·m , 16 lbf·ft)

If the torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.