


Frame servicing

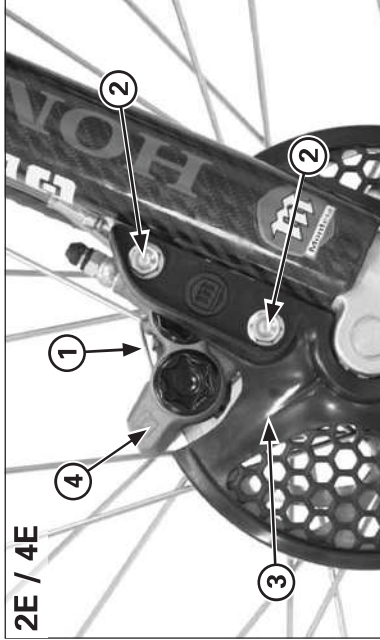


2E / 4E


- (1) PAD SPRING PIN
- (2) BOLTS
- (3) DISC COVER
- (4) CALIPER

Front Brake Pad Replacement (2E / 4E)

Remove the brake caliper mounting bolts, disc cover, flange collars and caliper.
Remove the spring pin from the pads.

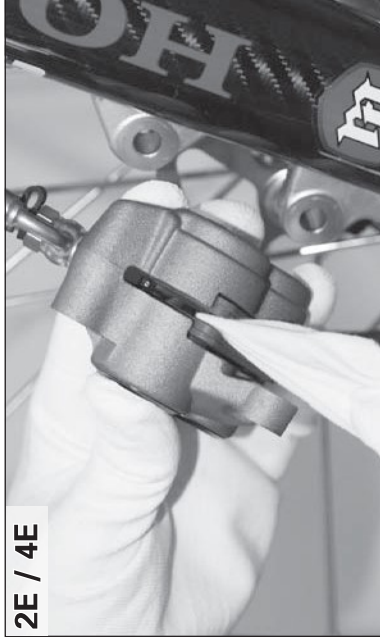

2E / 4E

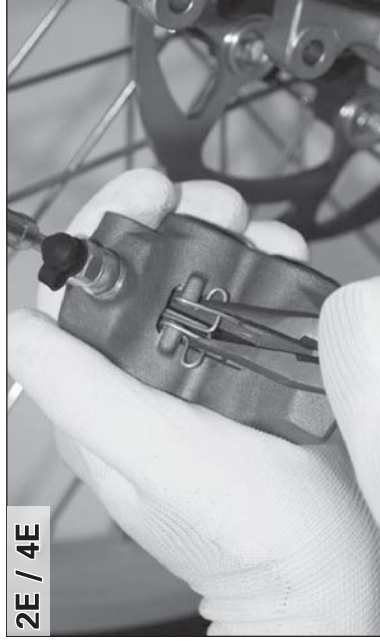


2E / 4E

Push the pistons **all** the way in to allow installation of new brake pads.
Check the brake fluid level in the reservoir as this operation causes the level to rise.

Remove the spring pin from the pads.

Clean the brake caliper inside especially around the caliper pistons.

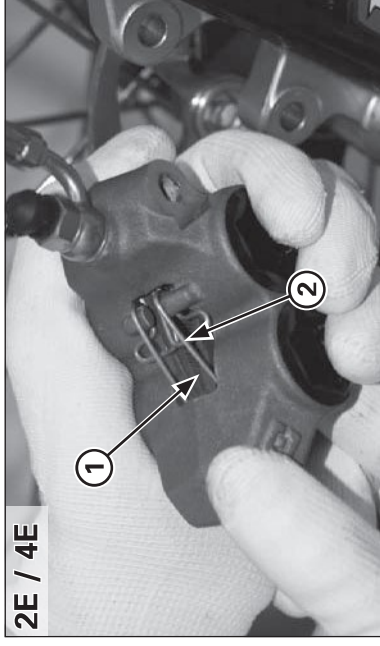

2E / 4E

- (1) NEW PADS
- (2) PAD PIN
- (3) PAD SPRING PIN

(1) NEW PADS
(2) PAD PIN
(3) PAD SPRING PIN

Install the new pads and secure with the spring pin for the pads.

Install the caliper to the fork so the disc is positioned between the pads, being careful not to damage the pads. Apply a locking agent to the caliper mounting bolt threads. Install the disc cover, then install and tighten the mounting bolts.

Torque: 26 N·m (2.7 kgf·m, 20 lbf·ft)

Operate the brake lever to seat the caliper pistons against the pads.