


CAMSHAFT BEARING INSPECTION

Install the cylinder head cover with 8 mm nuts.

Measure the camshaft bearing I.D. and calculate the camshaft-to-bearing clearance. Refer to page 6-4 for camshaft measurements.

SERVICE LIMIT: 34.05 mm (1.3405 in)

**CLEARANCE SERVICE LIMIT: 0.08 mm
(0.003 in)**

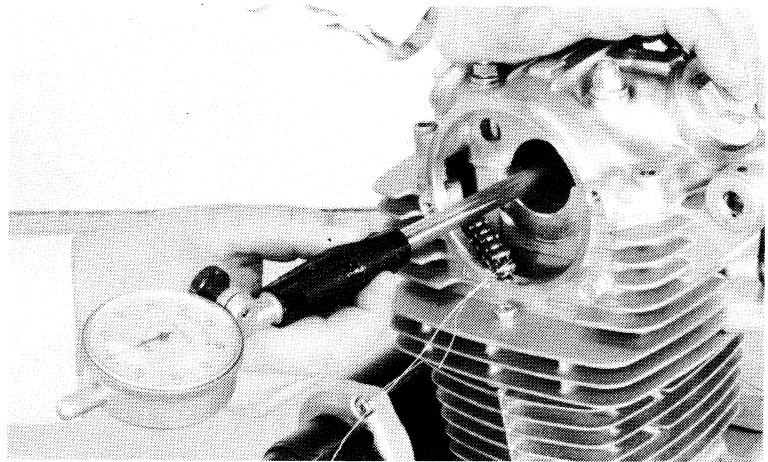


CAMSHAFT BUSHING INSPECTION

Measure the camshaft bushing I.D.

SERVICE LIMIT: 20.05 mm (0.789 in)

Calculate the camshaft bushing-to-camshaft clearance.

SERVICE LIMIT: 0.08 mm (0.003 in)

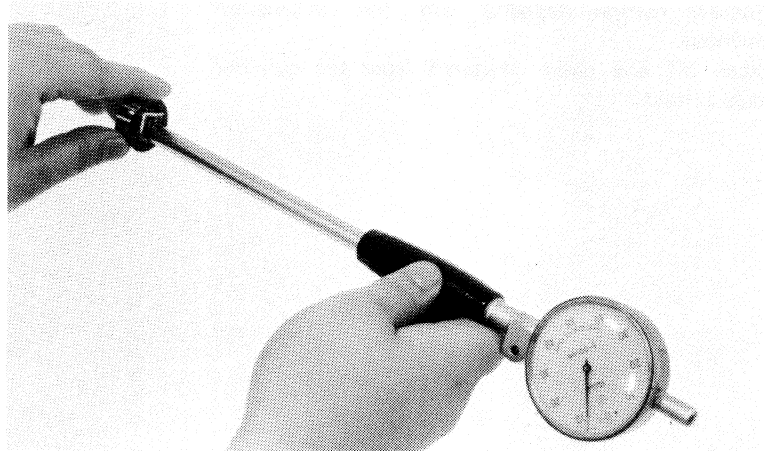

CYLINDER HEAD REMOVAL

Remove the cylinder head cover (Page 6-5) and carburetor insulator.

Remove the cam chain tensioner bolt, cylinder head base bolt and cylinder head.

NOTE

To prevent the cam chain from dropping into the crankcase, the cam chain should be held by a piece of wire.

