


Refer to *Important Safety Precautions* on page 23.

Keeping the wheels true (round) and maintaining correct spoke tension are critical to safe motorcycle operation. During the first few rides, spokes will loosen more rapidly due to the initial seating of the parts. Excessively loose spokes may result in instability at high speeds and the possible loss of control. It's also important that the rim locks are secure to prevent tire slippage.

## Wheel Rims & Spokes

1. Inspect the wheel rims (1) and spokes (2) for damage.
2. Tighten, any loose spokes and rim locks (3) to the specified torque:  
Spokes: 2.7 lbf·ft (3.7 N·m, 0.4 kgf·m)  
Rim Locks: 9 lbf·ft (12 N·m, 1.2 kgf·m)
3. Check wheel rim runout. If runout is noticeable, see an official Honda Service Manual for inspection instructions.

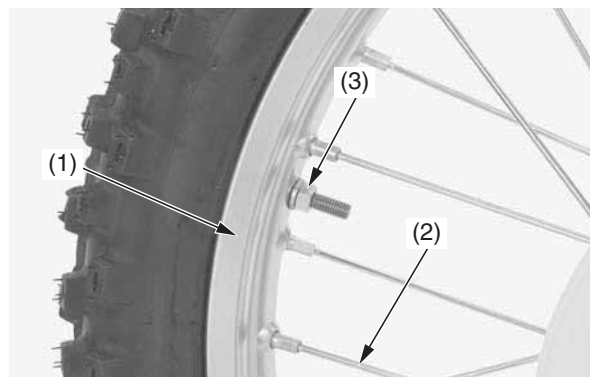

(1) wheel rim  
(2) spokes

(3) rim lock

## Axles & Wheel Bearings

See an official Honda Service Manual for inspection information:

1. Check the axle shaft for runout.
2. Check the condition of the wheel bearings.