



Preset Stations

You can store the frequencies of your favorite radio stations in the six preset buttons. Each button will store one frequency on the AM band, and two frequencies on the FM band.

(Models not equipped with Navigation System)

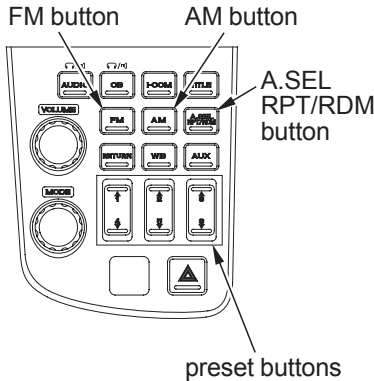

(Models equipped with Navigation System)

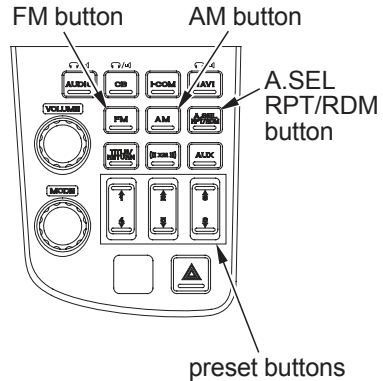

1. Check that A.SEL RPT/RDM is not turned on. If it is on, push the A.SEL RPT/RDM button to turn it off.
2. Select the desired band, AM or FM. FM1 and FM2 let you store two frequencies with each Preset button.
3. Use the TUNE or SEEK function to tune the radio to a desired station.
4. Pick the Preset button you want for that station. Press the button and hold it.
5. Repeat steps 1 to 3 to store a total of six stations on AM and twelve on FM.

Once a station's frequency is stored, simply press and release the proper Preset button to tune to it. The preset frequencies will be lost if your motorcycle's battery goes low (or dead) or is disconnected, or if the radio fuse is removed.