


Brakes

Front brake adjustment:

Raise the front wheel off the ground by placing a support block under the engine, spin the front wheel by hand and measure the free play distance that the front brake lever moves before the brake starts to engage. Free play, measured at the tip of the brake lever, should be maintained at 20–30mm (0.8–1.2 in.).

To adjust, turn the adjuster (1). Turning the adjuster in the clockwise direction will decrease the free play.

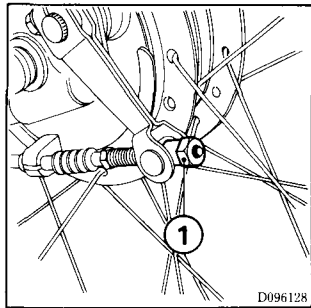

D096128

Frenos

Ajuste del freno delantero:

Levante la rueda delantera del suelo colocando un bloque de soporte debajo del motor, haga girar la rueda delantera a mano y mida el juego libre de la palanca de freno delantero antes de que el freno comience a engranar.

El juego libre, medido en el extremo de la palanca de freno, deberá mantenerse de 20–30 mm.

Para ajustar el freno, gire el ajustador (1). El girar el ajustador en el sentido del movimiento de las manecillas del reloj hará disminuir el juego libre y, por otro lado, el girarlo en el sentido contrario, aumentará el juego libre.