

## Fuse Replacement


The fuse box is located behind the right side cover. The recommended fuses are 15A and 7A.

When frequent failure of the fuse occurs, it usually indicates a short circuit or an overload in the electrical system. Consult your Honda dealer.

**WARNING:** Never use a fuse with a different rating from that specified on the fuse box and never use conductive material to replace a fuse.

(1) Fuse box

(2) Spare fuse

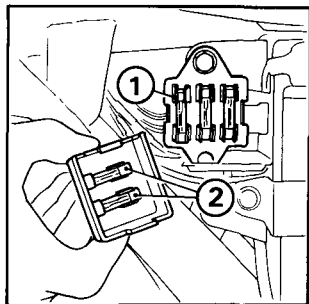

---

## Reemplazo de fusibles

La caja de fusibles está situada detrás de la cubierta lateral derecha. Los fusibles recomendables son los de 15A y 7A.

Cuando se produzca quemadura frecuente de fusibles, esto indica la existencia de un corto circuito o sobrecarga en el sistema eléctrico. En tal caso, consulte con su agente HONDA.

**ADVERTENCIA:** No utilice nunca un fusible que tenga un otro régimen que lo especificado en la caja de fusibles, nunca utilice otro material conductor en lugar de un fusible.

(1) Caja de fusibles

(2) Fusibles de repuesto