


## **Front Brake Brake fluid:**

It is important that proper level of brake fluid be maintained in the reservoir. Remove the cap, plate and diaphragm. Fill with DOT 3 Brake Fluid up to the level mark (1). Reinstall the diaphragm, plate and cap securely. Whenever the level falls near the bottom of the reservoir, check the brake pads for wear (see page 108). If the brake pad wear does not exceed the limits, this will usually indicate a fluid leak. Consult nearest your Honda dealer.

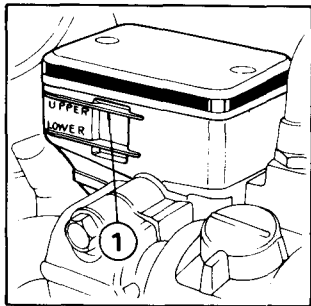

## **Freno delantero Líquido de freno:**

Es importante que el líquido sea siempre mantenido al nivel predeterminado en el depósito. Quite la tapa, placa y diafragma. Llene con líquido de freno DOT 3 hasta la marca de nivel (1). Remonte el diafragma, placa y tapa y fíjelos firmemente. Cada vez que se observe que el nivel baja al fondo del depósito, revise el estado de desgaste de las zapatas de freno (vea pág 108). Si el desgaste de las zapatas no excede el límite, esto por lo general indica una fuga del líquido. Consulte con su distribuidor HONDA más cercano.