


Battery Care

Inspecting and maintaining the electrolyte level should be performed at the mileage intervals indicated in the Maintenance Schedule (page 185) and Pre-ride Inspection (page 102). The battery is accessible by removing the right side cover. Disconnect the negative (-) cable from the negative terminal (1). Remove the bolt (2). Disconnect the positive (+) cable from the fuse terminal (3). The electrolyte level must be maintained between the upper (4) and lower (5) level marks. If low, add distilled water to raise the levels. Use a syringe or plastic funnel.

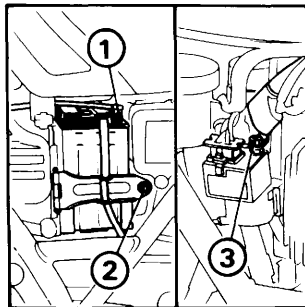

Mantenimiento de la batería

La inspección del nivel de electrolito de la batería y, su reposición, deberán efectuarse tan frecuentemente como se indica en el Programa de Mantenimiento (pág. 185), y en la sección "Inspección antes de la puesta en marcha (pág. 102). La batería es accesible desmontando la cubierta lateral izquierda. Desconecte el cable negativo (-) del borne negativo (-). Quite el perno (2). Desconecte el cable positivo (+) del borne del fusible (3). El nivel del electrolito deberá estar entre la marca superior (4) y la inferior (5) del nivel. Si el nivel está más bajo que lo indicado, agregue agua destilada. Utilice una jeringa o embudo plástico.

