


## Fuse Replacement

The fuse box (1) is located between the handlebars. Main fuse (3) is installed beside the battery. When frequent failure of the fuse occurs, it usually indicates a short circuit or an overload in the electrical system. Consult your Honda dealer.

**WARNING:** Never use a fuse with a different rating from that specified on the fuse box and never use conductive material to replace a fuse.

**CAUTION:** Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.

- |     |           |     |                 |
|-----|-----------|-----|-----------------|
| (1) | Fuse box  | (2) | Spare fuse      |
| (3) | Main fuse | (4) | Spare main fuse |

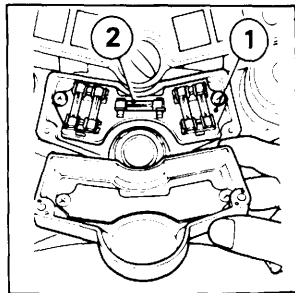

## Reemplazo de los fusibles

La caja de fusibles (1) está situada dentro de la manubrios. El fusible principal (3) está instalado al lado de la batería. Cuando se produzca quemadura frecuente de fusibles, esto indica la existencia de un corto circuito o sobrecarga en el sistema eléctrico. En tal caso, consulte con su agente HONDA.

**ATENCIÓN:** No utilice nunca un fusible que tenga un otro régimen que lo especificado en la caja de fusibles, y nunca utilice otro material conductor en lugar de un fusible.

**PRECAUCIÓN:** Girar la llave de contacto a la posición OFF antes de comprobar o recambiar los fusibles para evitar cortocircuitos accidentales.

- |     |                   |     |                              |
|-----|-------------------|-----|------------------------------|
| (1) | Caja de fusibles  | (2) | Fusible de repuesto          |
| (3) | Fusible principal | (4) | Fusible principal de repuest |

