


RATROL LIGHT FLASHER SWITCH

The patrol light flasher switch (1) is located on the right handlebars.
(ON) A relay is energized and the patrol light flashes when pushing the patrol light flasher switch (See page 8).

(OFF) The patrol light flasher relay is open when repushing the patrol light flasher switch.

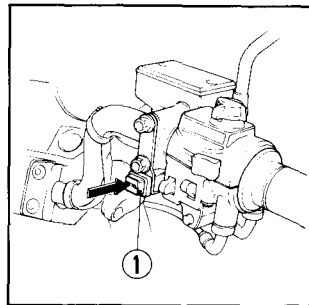

INTERRUPTOR DEL DESTELLADOR DE LUZ DE PATRULLA

El interruptor del destellador de luz de patrulla (1) está situado en el manillar derecho.

(ON) Un relé se activa y la luz de patrulla destella cuando se presiona el interruptor del destellador de la luz de patrulla (ver la página 9).

(OFF) ... El relé del destellador de la luz de patrulla se anre cuando se vuelve a presionar el interruptor del destellador.