

Digital Clock

The digital clock displays the time of day or night, and it has its own power source.


To adjust time, proceed as follows:

Turn the ignition switch to the ON position.

Hour . . . Press the Hour button (1) until the correct hour is displayed. Be sure to select the AM or PM hour.

Minute . . . Press the Min button (2) until the correct minute is displayed. The clock is now set.

NOTE: If the digital clock display (3) becomes faint or the clock becomes very slow, the battery of the clock has run down. In this case, have it replaced by your Honda dealer.

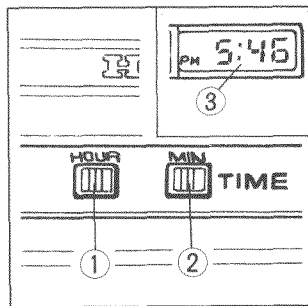

Reloj digital

El reloj digital muestra la hora del día o de la noche y tiene su propia fuente de alimentación. Para ajustar la hora, proceder de la forma siguiente:

Poner el interruptor del encendido en la posición ON.

Horas Presionar el botón de las horas (1) hasta que se indique la hora correcta. Asegurarse de seleccionar AM o PM.

Minutos . . Presionar el botón de los minutos (2) hasta que se indiquen los minutos correctos. El reloj quedará así puesto en hora.

NOTA: Si la indicación del reloj digital (3) pierde intensidad o el reloj se retrasa, la pila del reloj se habrá desgastado. En este caso, procurar que el concesionario de HONDA cambie la pila gastada.