

Seat lock


To release:

The seat lock (1) is below the left side of the seat. To lift the seat, insert the ignition key (2) and turn it clockwise to unlock.

To apply:

Press down on the seat until the lock engages. After locking, make sure that the seat is locked securely by trying to lift it up by hand.

NOTE: Do not leave the key on the fuel tank as the key cannot be taken out once the seat is locked.

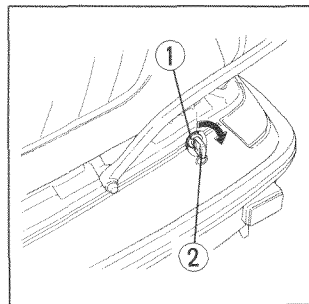

Cierre del asiento

Para abrirlo:

El cierre del asiento (1) está debajo del lado izquierdo del asiento. Para levantar el asiento, insertar la llave de contacto (2) y girarla hacia la derecha para abrir el cierre.

Para cerrarlo:

Presionar hacia abajo el asiento hasta que el cierre quede trabado. Después de cerrarlo, cerciorarse de que el asiento quede bien trabado tratando de levantarlo con la mano.

NOTA: No dejar la llave en el cierre del depósito de combustible ya que ésta no podrá sacarse una vez de haber trabado el asiento.