


Turn the ignition switch on.

With closed throttle, push the starter button.

NOTE: The electric starter will only work when the brake pedal is operated.

WARNING: The rear wheel will spin if not restrained by the brake or contact with the ground. Accidental contact with the spinning rear wheel could cause personal injury.

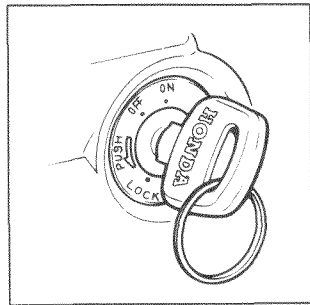

Activar el interruptor de encendido

Con el acelerador cerrado, presionar el botón del arrancador.

NOTA: El arrancador eléctrico funcionará cuando esta palanca sea accionada.

ATENCION: La rueda trasera rotará si no es sujeta por el freno o mediante el contacto con el suelo. El contacto accidental con la rueda mientras está girando puede causar lesiones personales.

