


MAINTENANCE

Air Cleaner

1. Remove the rear protector.
2. Remove the left rear side cover (1) by removing the screws.
3. Remove the air cleaner cover (2) by removing the screws.
4. Remove the air cleaner element (3) by removing the screw and replace it with a new one.
5. Reinstall the removed parts in the reverse order of removal.

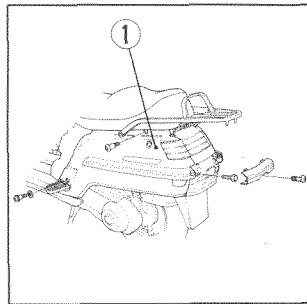

MANTENIMIENTO

Filtro de aire

1. Quitar el protector trasero.
2. Quitar la tapa trasera izquierda (1) extrayendo los tornillos.
3. Quitar la tapa del filtro de aire (2) extrayendo los tornillos.
4. Quitar el elemento del filtro de aire (3) extrayendo el tornillo y luego cambiar el elemento por otro nuevo.
5. Volver a instalar las piezas quitadas siguiendo el orden de desmontaje pero a la inversa.

