


## WARNING

- Never use a fuse with a different rating from that specified on the fuse holder and never use conductive material to replace a fuse.
- Do not pry the clips open to get a fuse out; you could bend them and cause poor contact with the new fuse. A loose fuse could cause damage to the electrical system and even start the fire.

## Throttle

Check throttle operation in all steering positions. Replace or correct cable routing if throttle does not operate freely in all steering positions.

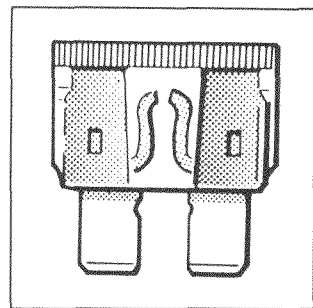

(1) Blown fuse

## ATENCION:

- Nunca use un fusible de amperaje distinto al especificado en el portafusible, ni tampoco use materiales conductores en lugar del fusible.
- No abra las presillas forzándolas para extraer el fusible, ya que pudiera doblarlas y después podrían hacer un contacto malo con el fusible nuevo. Un fusible flojo puede causar daños al sistema eléctrico, e incluso puede ser la causa de un incendio.

## Acelerador

Verifique el funcionamiento del acelerador en todas las posiciones del manillar de dirección. Cambie o corrija la instalación del cable si el acelerador no funciona correctamente en todas las posiciones de la dirección.

(1) Fundido