


Air Cleaner Servicing

1. Remove the right and left air cleaner case covers (1) by unscrewing the case fixing nuts (2).
2. Remove the air cleaner element (3) by unscrewing the element fixing bolt and screw (4) and connecting tube fixing screw (5).
3. Clean the element (3) by tapping, brushing lightly with a soft brush and then blowing from the inside with an air line.

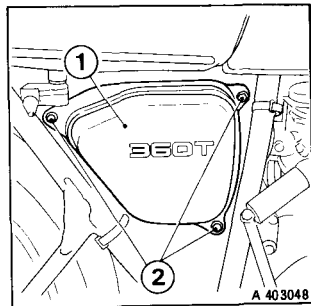

Mantenimiento del filtro de aire

1. Desmónte las cubiertas del cuerpo de filtro de aire derecha e izquierda (1) desatornillando las tuercas que fijan el cuerpo (2).
2. Desmónte el elemento del filtro de aire (3) destornillando los tornillos fijando el elemento (4) y el tornillo que fija la tubería de conexión (5).
3. Limpie el elemento (3) tapando y pasando un cepillo blando, y luego dirija el aire comprimido del interior del elemento.

