


### **Decompressor: (CT 200)**

The Honda CT 200 has a decompressor lever (1), located on the right side of the cylinder head, to aid starting when using the recoil starter. Before starting the engine, raise the lever to the DECOMP position (A). The lever moves down automatically when the recoil starter is pulled.

#### **NOTE:**

\* If the lever does not stay in the DECOMP position, there is no cylinder compression to release. Just pull the recoil starter to start the engine.

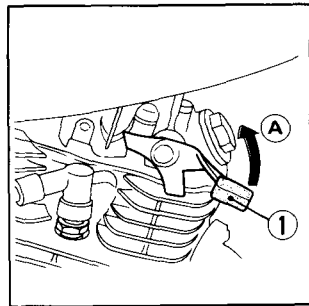

---

### **Descompresor: (CT200)**

La Honda CT200 tiene una palanca de descompresión en el lado derecho de la culata para facilitar el arranque cuando se utiliza el arrancador de retroceso. Antes de arrancar el motor, elevar la palanca hacia la posición DECOMP (A). La palanca se moverá automáticamente hacia abajo cuando se tire del arrancador de retroceso.

#### **NOTA:**

Si la palanca no se mantiene en la posición DECOMP, no existe compresión del cilindro que pueda liberarse. Tirar simplemente del arrancador de retroceso para arrancar el motor.