


Fuel System Warning Lamp

This lamp (1) lights when there is a malfunction in the fuel system. When the ignition switch is set to ON, it should light for 1 or 2 seconds and then go off.

CAUTION:

- A malfunction in the fuel system is indicated when the lamp does not light with the main switch at ON or when it remains lighted. Go to your Honda dealer for repair and inspection.
- If the fuel system warning lamp (1) comes on while riding, reduce the speed and go to the Honda dealer for repair and inspection.

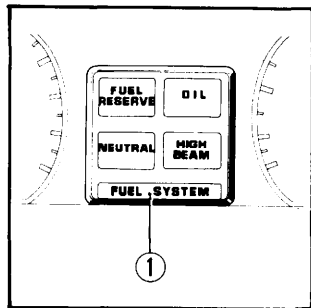

Lámpara de aviso del sistema de combustible

Esta lámpara (1) se ilumina cuando el sistema de combustible no funciona adecuadamente. Cuando el interruptor de encendido se pone en la posición ON, la lámpara deberá iluminarse por 1 o 2 segundos y a continuación apagarse.

PRECAUTION:

- Cuando la lámpara no se ilumina con el interruptor principal en la posición ON, o cuando permanece iluminada, esto indicará que el sistema de combustible no funciona adecuadamente. Acuda a su representante Honda para inspección y reparaciones.
- Si la lámpara de aviso del sistema de combustible se ilumina mientras que Ud. está conduciendo, reduzca la velocidad y acuda a su representante Honda para inspección y reparaciones.