


Turbo Meter

The turbo meter (1) lights are soon as the engine is started, and it starts working as soon as the turbo charger starts up.

CAUTION:

- Go to your Honda dealer for repairs if the turbo meter does not work even when the throttle is operated.
- If the "TURBO" characters of the turbo meter or both ends of the meter wink in red while you are riding your model, reduce the engine speed immediately and go to your Honda dealer for repair and inspection.

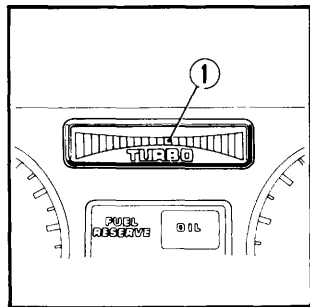

Turboindicador

El turboindicador (1) se ilumina tan pronto como se arranca el motor y empieza a funcionar tan pronto como se arranca el turboalimentador.

PRECAUCION:

- Acuda a su representante Honda para reparaciones si el turboindicador no funciona a pesar de que se haga funcionar la aceleración.
- Si los caracteres "Turbo" del turboindicador o ambos extremos del indicador parpadean en rojo mientras que Vd. conduce su motocicleta, reduzca inmediatamente la velocidad del motor y acuda a su representante Honda para inspección y reparaciones.