


## Air Cleaner Servicing

1. Remove the right fairing cover (1) by loosen two screws (2).
2. Remove the air cleaner case cover (3) by loosen a screw (4).
3. Remove the air cleaner element with the holder.
4. Remove the element holder. Remove the element from the holder.
5. Wash the cleaner element (5) in clean solvent and allow to dry thoroughly.
6. Soak the air cleaner element in clean gear oil (SAE80–SAE90) until saturated, then squeeze out excess oil.

**WARNING:** Gasoline or low flash point solvents are highly flammable and must not be used to clean the element.

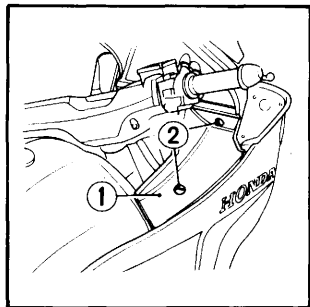

## Servicio del filtro de aire

1. Extraer la cubierta de carenado derecha (1) aflojando los dos tornillos (2).
2. Extraer la cubierta de la caja del filtro de aire (3) aflojando un tornillo (4).
3. Extraer el elemento del filtro de aire con el soporte.
4. Desmonte el porta-elemento. Quite el elemento del portaelemento.
5. Lave el elemento del filtro (5) en un solvente limpio y déjela secar completamente.
6. Ponga a remojar el elemento del filtro de aire en el aceite de engranaje (SAE80–SAE90) limpio hasta que saturé. Luego, sáquele para purgar el exceso del aceite.

**ATENCION:** La gasolina y otros solventes de bajo punto de ignición son extremadamente inflamables y no deben utilizarse para lavar el elemento.

