


### Rear air pressure adjustment:

1. Place the motorcycle on its center stand. Do not use the side stand or you will get false pressure readings.
2. Remove the right side cover (1).
3. Remove the rear shock absorber air valve cap (2).
4. Check the air pressure.
5. Adjust air to the recommended pressure.

#### **NOTE:**

- We recommend that you do not exceed recommended air pressure or the ride will be harsh and uncomfortable.
- The side cover (1) will be damaged if pulled roughly toward you, move it from (A) to (B) as shown in the figure.

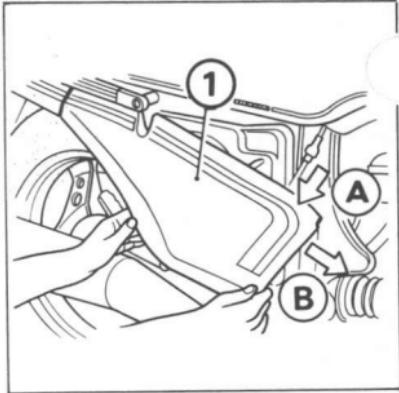

### Ajuste de la presión de aire trasera:

1. Comprobar y ajustar la presión de aire cuando los tubos de las horquillas frontales y amortiguadores traseros estén fríos antes de la conducción.
2. Extraer la cubierta lateral derecha (1).
3. Extraer el tapón de la válvula de aire del amortiguador trasero.
4. Comprobar la presión de aire.
5. Añada aire a la presión recomendada.

#### **NOTA:**

- Recomendamos que no exceda la presión de aire recomendada o el manejo será severa e incómoda.
- Ya que la cubierta lateral (1) puede dañarse si se tira de ella violentamente hacia Vd., moverla de (A) a (B) como se muestra en la figura.

