


4. Move the choke lever (1) left to the Fully Closed (A), if the engine is cold.
5. Operate the throttle slightly and press the starter button.
6. Warm up the engine at  $2,000 - 2,500 \text{ min}^{-1}$  ((rpm) until it runs smoothly with the choke open (B).

**CAUTION:** The oil pressure warning light should go off within a few seconds after the engine is started. If the light remains on, turn off the engine immediately and check the oil level. If the level is adequate, do not operate the motorcycle until the lubrication system has been examined by a qualified mechanic.

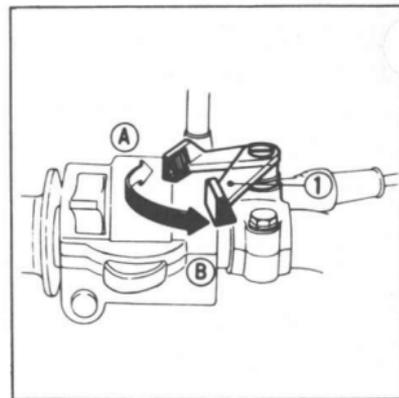

4. Si el motor está frío, poner la palanca de estrangulación (1) en la posición (A) (completamente cerrada).
5. Gire levemente el mango del acelerador y oprima el botón de arranque.
6. Caliente el motor haciéndolo marchar en vacío a  $2.000 - 2.500 \text{ min}^{-1}$  (rpm) hasta que corra suavemente, con el estrangulador abierto (B).

**PRECAUCION:** La lámpara de aviso de la presión de aceite deberá apagarse pocos segundos después de que haya arrancado el motor. Si la lámpara se queda encendida, inmediatamente pare el motor y revise el nivel del aceite. Si el nivel está correcto, no ponga la motocicleta en marcha hasta que haya examinado completamente el sistema de lubricación por un mecánico capacitado.

