


Turn Signal Switch

To signal a left turn move the switch (1) to the "L" position. To signal a right turn move the switch (1) to the "R" position. When the switch is moved within range (A), the turn signal flashes until the switch is released, then the switch returns to the center off position. Moving the switch beyond this range, the turn signal flashes and warning buzzer sounds (except U.K. type) until the switch is moved to the center off position.

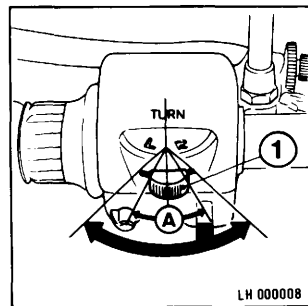

Control de señales de direcciones

Coloque el interruptor (1) en la posición "L" para indicar la vuelta a la izquierda, o en la posición "R" para la vuelta a la derecha. Cuando el interruptor está en la zona "A", la señal de dirección dará una luz intermitente hasta que se suelte el interruptor. Al soltarlo, el interruptor volverá a la posición fuera del centro. Haciendo mover el interruptor más allá de esta zona, la señal de dirección dará una luz intermitente y sonará el zumbador (salvo el tipo R.U.), hasta que se mueva el interruptor a la posición fuera del centro.