


ACC Terminal

The ACC terminal (1) is in the fuse box (2) in the top compartment and provides 12V DC power for electrical accessories. A maximum of 60 Watts (5 amps) may be connected to the terminal. Higher current demands may blow the fuse or discharge the battery.

Review the **LOADING AND ACCESORIES WARNING** (pages 14–24) before installing accessories.

Connect accessory electrical leads securely, and keep them insulated, away from hot parts and sharp edges.

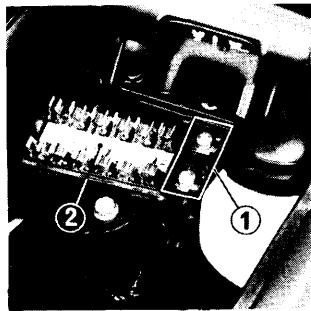

Terminal ACC

El terminal ACC (1) está en la caja de fusible (2) situada, a su vez, en el compartimiento de arriba y suministra una tensión de 12V, c.c. como energía para los accesorios eléctricos. El máximo de 60 vatios (5 amperios) puede conectarse a este terminal. Las demandas de corriente más altas podrán fundir el fusible o descargarán la batería.

Revisar el **ATENCIÓN DE CARGA Y ACCESORIOS** (páginas 14–24) antes de instalar los accesorios.

Conectar los hilos eléctricos de los accesorios con seguridad, y mantenerlos aislados, separados de partes calientes y de bordes afilados.