


Turn Signal Switch

Move the switch (1) to (L) to signal a left turn, to (R) to signal a right turn; the appropriate turn signal and indicator will blink. The switch returns automatically to OFF when the handlebars are returned to the straight ahead position.

To signal a lane change, partially move the switch right or left of the "A" position and hold it there; the switch will return to center OFF when released.

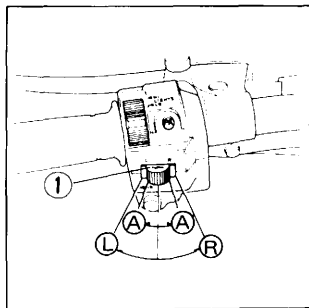

Interruptor de luz indicadora de dirección

Pase el interruptor (1) hacia la izquierda para indicar un viraje a la izquierda y hacia la derecha para un viraje a la derecha. El interruptor regresará a la posición OFF (APAGADO) cuando el manillar vuelve a la posición de todo derecho.

Para indicar un cambio de senda, pase el interruptor parcialmente hacia la derecha o hacia la izquierda a la posición (A) y manténgalo en esa posición. El interruptor regresará a la posición central OFF (APAGADO) cuando está suelto.