


Fuse Replacement

The fuse box (1) is located between the handlebars. Main fuse (3) is installed near the battery. When frequent failure of the fuse occurs, it usually indicates a short circuit or an overload in the electrical system. Consult your Honda dealer.

WARNING: Never use a fuse with a different rating from that specified on the fuse box and never use conductive material to replace a fuse.

- | | |
|------------------|---------------------|
| (1) Fuse box | (2) Spare fuse |
| (3) Main fuse | (4) Spare main fuse |
| (5) Fuse remover | |

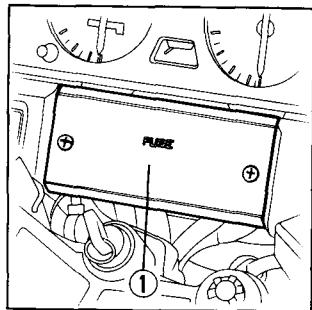

Remplacement des fusibles

La boîte de fusibles (1) se trouve entre les bras de guidon. Le fusible principal (3) est situé près de la batterie. Lorsque le fusible saute fréquemment, cela indique généralement un court-circuit ou une surcharge du circuit électrique. Dans un tel cas, consulter le concessionnaire Honda.

ATTENTION: Ne jamais utiliser des fusibles ayant un taux différent de celui spécifié sur la boîte de fusibles et ne jamais substituer des fusibles par les autres matériaux conducteurs.

- | | |
|---------------------------|-----------------------------------|
| (1) Boîte de fusibles | (2) Fusible de rechange |
| (3) Fusible principal | (4) Fusible principal de rechange |
| (5) Extracteur de fusible | |

