


5. Unscrew the three air cleaner case cover screws (4) and remove the cover (5).
6. Remove the air cleaner element (6) from the air cleaner case.
7. Install a new element in the air cleaner case.
8. Install the air cleaner case cover with the three attaching screws.
9. Install the fuel tank and seat in the reverse order of removal.
10. Reinstall the right and left side covers.

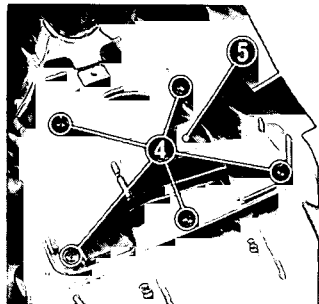

5. Dévisser les trois vis du couvercle de boîtier de filtre à air (4) et déposer le couvercle (5).
6. Déposer l'élément filtrant (6) du boîtier de filtre à air.
7. Poser l'élément filtrant neuf dans le boîtier de filtre à air.
8. Reposer le couvercle du boîtier de filtre à air avec les trois vis de fixation.
9. Reposer le réservoir d'essence et la selle en inversant l'ordre de la dépose.
10. Reposer les caches latéraux droit et gauche.

