


Ignition Switch

The ignition switch is located directly below the indicator panel.

OFF: All electric circuits open. Engine cannot be started. Key can be removed.

ON: All electric circuits close. Turn signal and stoplight can be operated. Engine can be started and headlight can be operated only when the engine is running. Key cannot be removed.

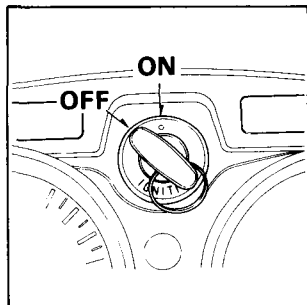

Interruptor del encendido

El interruptor del encendido está situado directamente debajo del tablero de indicadores.

OFF: Todos los circuitos eléctricos están abiertos. No se puede poner el motor en marcha. Se puede retirar la llave.

ON: Todos los circuitos eléctricos están cerrados. La luz de señales de cruce y la luz de freno pueden funcionar. El motor puede arrancarse, y el faro puede encenderse sólo cuando el motor éste en movimiento. No se puede retirar la llave.