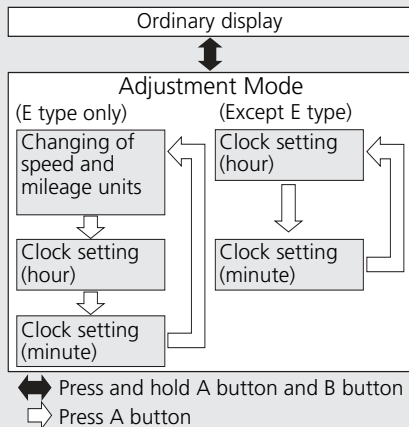## Instruments *(Continued)*
Adjustment Mode

You can adjust the following settings.

- Clock setting.
- (E type only) Changing of speed and mileage units.

```
┌─────────────────────────────────────┐
│            Ordinary display          │
└─────────────────────────────────────┘
                  ⬍
┌─────────────────────────────────────┐
│            Adjustment Mode           │
│  (E type only)      (Except E type)  │
│ ┌──────────────┐   ┌──────────────┐  │
│ │Changing of   │◄──│Clock setting │◄─┐│
│ │speed and     │   │(hour)        │  ││
│ │mileage units │   └──────────────┘  ││
│ └──────────────┘          ⬇          ││
│        ⬇           ┌──────────────┐  ││
│ ┌──────────────┐   │Clock setting │──┘│
│ │Clock setting │   │(minute)      │   │
│ │(hour)        │   └──────────────┘   │
│ └──────────────┘                      │
│        ⬇                              │
│ ┌──────────────┐                      │
│ │Clock setting │──────────────────────┘
│ │(minute)      │                      │
│ └──────────────┘                      │
└─────────────────────────────────────┘
```

⬍ Press and hold A button and B button
⇨ Press A button

By the following conditions, the adjustment mode can also return to the ordinary display and the adjustment will be set.

- The button is not pressed for about 30 seconds.
- Turn the ignition switch off and then on.

1 (E type only) Changing the speed and mileage units:

❶ Turn the ignition switch on.

❷ Press and hold A button and B button until the units start flashing.

❸ Press B button to select either "km/h" & "km" or "mph" & "mile" for the speedometer, odometer and tripmeter.

http://mototh.com