

FRONT WHEEL/SUSPENSION/STEERING

Drive the new right bearing in using the following tools.

NOTE:

Install the bearings with its marking side facing out.


TOOLS:

Driver	07749 - 0010000
Attachment, 37 x 40 mm	07746 - 0010200
Pilot, 12 mm	07746 - 0040200



Install the distance collar.

Drive the new left bearing in using the same tools.

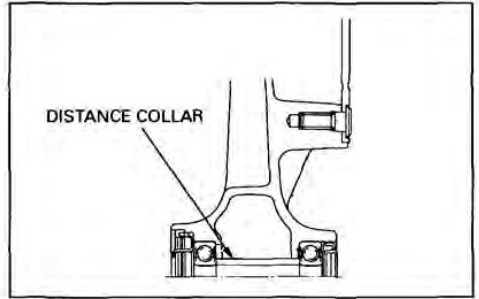

ASSEMBLY

