


ASSEMBLY

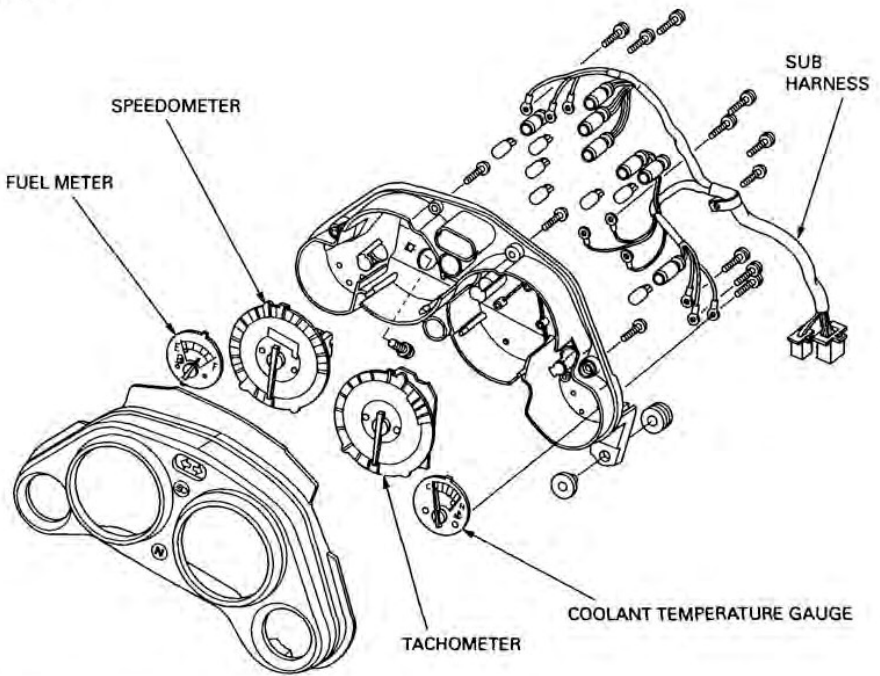

Assemble the speedometer in the reverse order of disassembly.

NOTE:

- Route the sub harness as shown.

INSTALLATION

Assemble the upper cowl (page 2-4).

NOTE:

Route the combination meter wire and cable properly (page 1-17).

