


1. Remove the middle cowls (page 72 ).
2. Disconnect the radiator fan connector (1).
3. Release the wire harness clip (2) from the radiator heat guard (3).
4. Remove the brake hose mount bolt (4).  
(CBR600RR ABS only)
5. Remove the radiator lower mount nut (5) and radiator lower mount bolt (6).  
(CBR600RR)
- Remove the radiator lower mount bolt.  
(CBR600RR ABS)
6. Remove the radiator upper mount bolt (7).

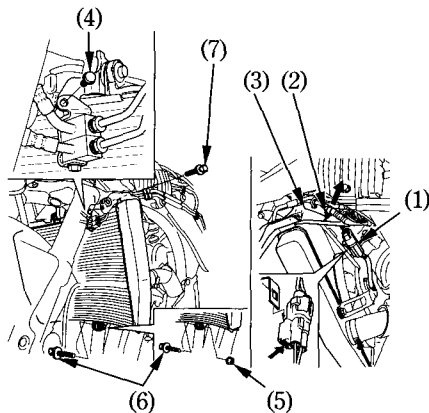

- (1) Radiator fan connector
- (2) Wire harness clip
- (3) Radiator heat guard
- (4) Brake hose mount bolt  
(CBR600RR ABS only)
- (5) Radiator lower mount nut  
(CBR600RR only)
- (6) Radiator lower mount bolt
- (7) Radiator upper mount bolt