


3. You can now set the combination. Align the red marks (3) with the guide point (4) on the cone. Replace the lock wheels one at a time, lining up your selected numbers with the guide point on the cone.

**NOTE:**


\* Reversing the wheels will cause the lock to jam.

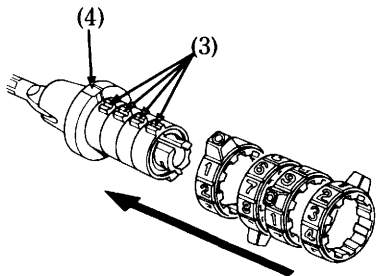

(3) Red marks

(4) Guide point

4. After positioning all four lock wheels, place the cone (5) onto the lock housing and turn it a quarter turn (90°) clockwise.

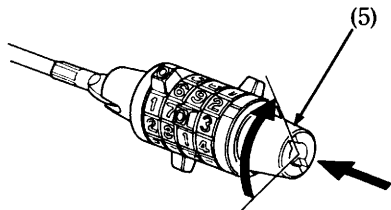

(5) Cone