


4. Raise the front of the fuel tank (4) and install the bolt (1) to frame body.

Do not raise the fuel tank higher than the stopper cable (5) allows.

5. Insert a pin spanner (6) from the tool set in the extension bar (7).
6. Place the base of the extension bar over the installed bolt and position the pin spanner so that it supports the fuel tank.

When raising the fuel tank, be careful not to allow the collars fall down.

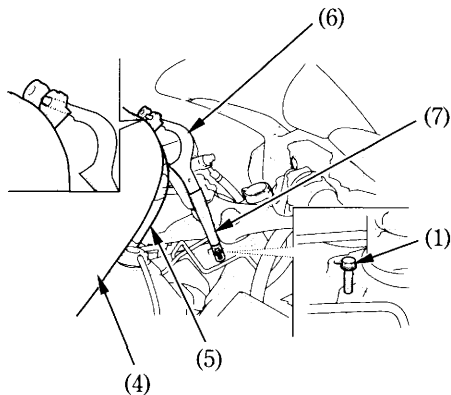

- (1) Bolt
- (4) Fuel tank
- (5) Stopper cable

- (6) Pin spanner
- (7) Extension bar