

PRECAUTIONS BEFORE RIDING.....

Observe the following precautions:

- When crossing a stream or when riding in a deep puddle, have the ends of the breather pipe and the carburetor flow pipe raised up to the level of seat. At the end of riding, water should be drained from the carburetor float chamber.
- Take care not to block air cleaner suction port in tool tray with a tool bag or rags, this will result in poor engine performance.


Optional alterations for off-the-road use

Consult your Honda dealer for recommended adjustments and optional alterations best suited to your riding conditions.

- Increasing minimum ground clearance
 1. Loosen the three front fork attach-

ing bolts ① and lower the front fork pipe ② until its upper surface becomes flush with the fork top bridge ③.

2. Retighten the front fork attaching bolts firmly.

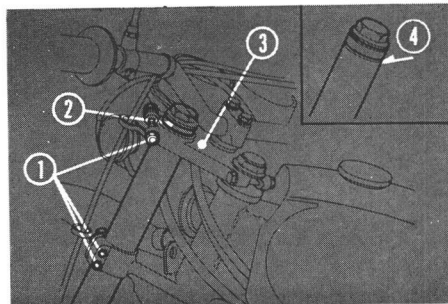

- ① Front fork attaching bolts
- ② Front fork pipe
- ③ Fork top bridge
- ④ Alignment mark