


### Preparation for off-the-road use :


Consult your Honda dealer for recommended adjustments best suited to your riding conditions.

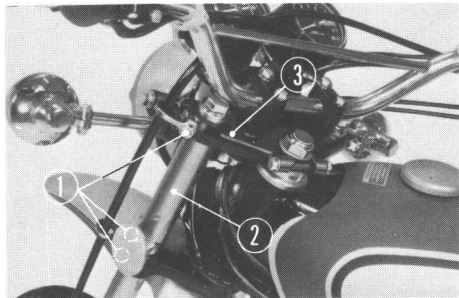

- ① Front fork attaching bolts
- ② Front fork pipe

### ● Increasing minimum ground clearance

1. Loosen the three front fork attaching bolts ① and lower the front fork pipe ② until its upper surface becomes flush with the fork top bridge ③.
2. Retighten the front fork attaching bolts.

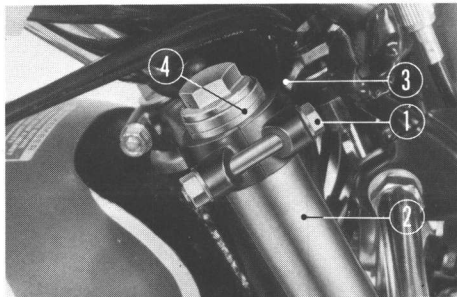

- ③ Fork top bridge
- ④ Alignment mark