


As the engine and the muffler etc will be hot directly after riding, wait for these areas to cool down before attempting to remove fuel from the tank.

Make sure that you remove fuel in a well ventilated area.

1. Make sure that the motorcycle is in an upright position.
2. Use a normal handpump to transfer fuel from the fuel tank to a storage holder.
3. Place the fuel cock onto the RES position.
4. Place a fuel capturing container underneath the carburettor drain tube.
5. Open the carburettor drain screw, and close off the fuel drain screw.
6. Place the fuel cock in the "OFF" position.

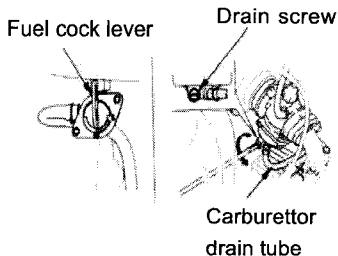

When lifting/transporting the motorcycle
Collapse the handle bars wherever necessary
as explained on page 22.

When loading onto / into a vehicle
Always make sure that the motorcycle is
upright and that it is securely fastened before
transporting.