




REAR SUSPENSION

Connect the reservoir to the hose.

NOTE

Do not allow air to enter the damper oil.

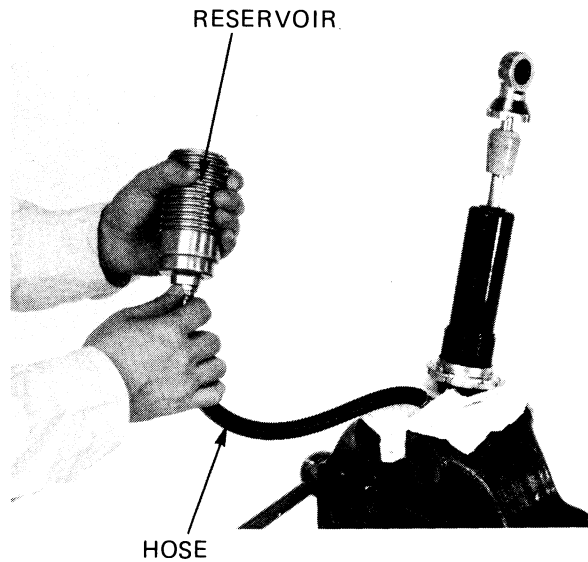

Fill the reservoir with nitrogen to 20 ± 2 kg/cm² (284 ± 28 psi)

WARNING

- Use only nitrogen to pressurize the shock absorber. The use of an unstable gas can cause a fire or explosion.
- Adjust nitrogen pressure to only 20 ± 2 kg/cm² (284 ± 28 psi).
- Install a new reservoir valve cap.

