

'83 ATC250R ADDENDUM

---


Install the brake pedal.

Install the master cylinder on the frame and tighten the bolts to the specified torque.

**TORQUE: 30-40 N·m (3.0-4.0 kg-m, 22-29 ft-lb)**

Install the skid plate, rear shock absorber and rear axle.

MASTER CYLINDER

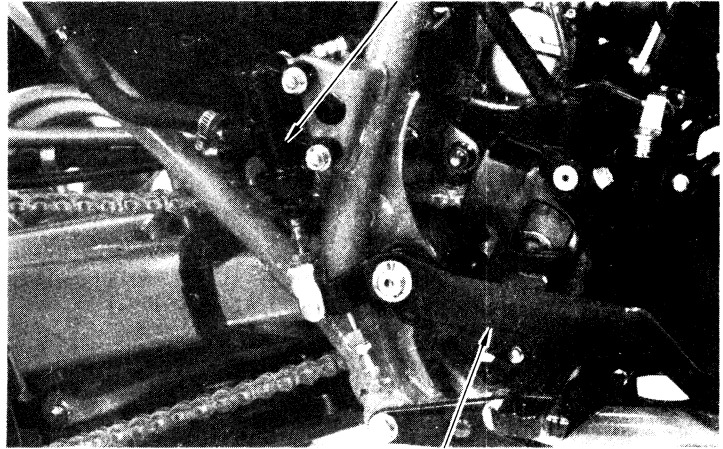

BRAKE PEDAL